 




DTR-HV250
Quick start guide



1 Package Contents

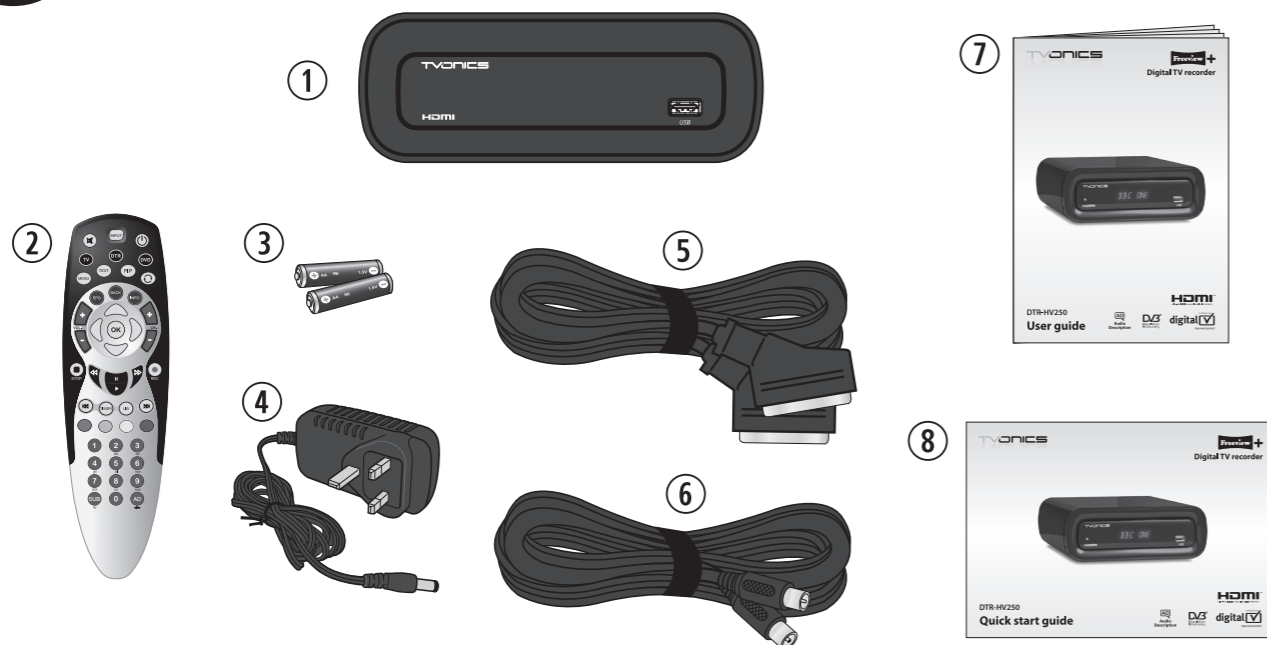


- ① Digital TV recorder (DTR)
- ② Remote control
- ③ Batteries (2xAA)
- ④ AC mains adaptor
- ⑤ SCART cable
- ⑥ RF cable
- ⑦ User guide
- ⑧ Quick start guide

2 Inserting the Batteries into the Remote Control



- Always check the positive/negative symbols on the batteries to ensure they are inserted correctly.
- Don't forget to get rid of old batteries safely. Check with your local council for how you should get rid of batteries. Never put batteries on a fire or in the bin with normal household waste.

3 Connecting Equipment to the Rear of the Recorder

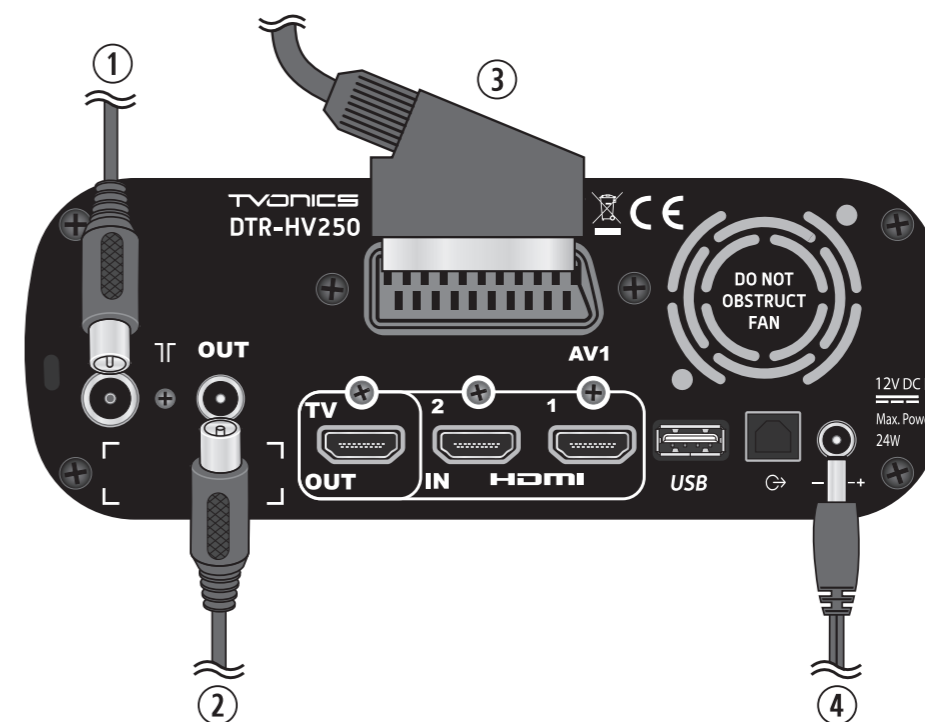


- ① Plug your aerial lead into the **RF IN** socket of the recorder.
- ② Plug the RF cable between the **RF OUT** socket of the recorder and your TV, Video or DVD recorder.
- ③ Plug a SCART cable between the **AV1** socket of the recorder and your TV, Video or DVD recorder.
- ④ Plug the supplied AC mains adaptor between the power socket of the recorder and a standard wall socket. **Only switch on the wall socket when all cables have been attached.**

Please refer to page 9 of the User Guide for information on connecting equipment using a HDMI cable, a USB Flash drive or an audio system using a SPDIF cable.

4

Overview of the Remote control

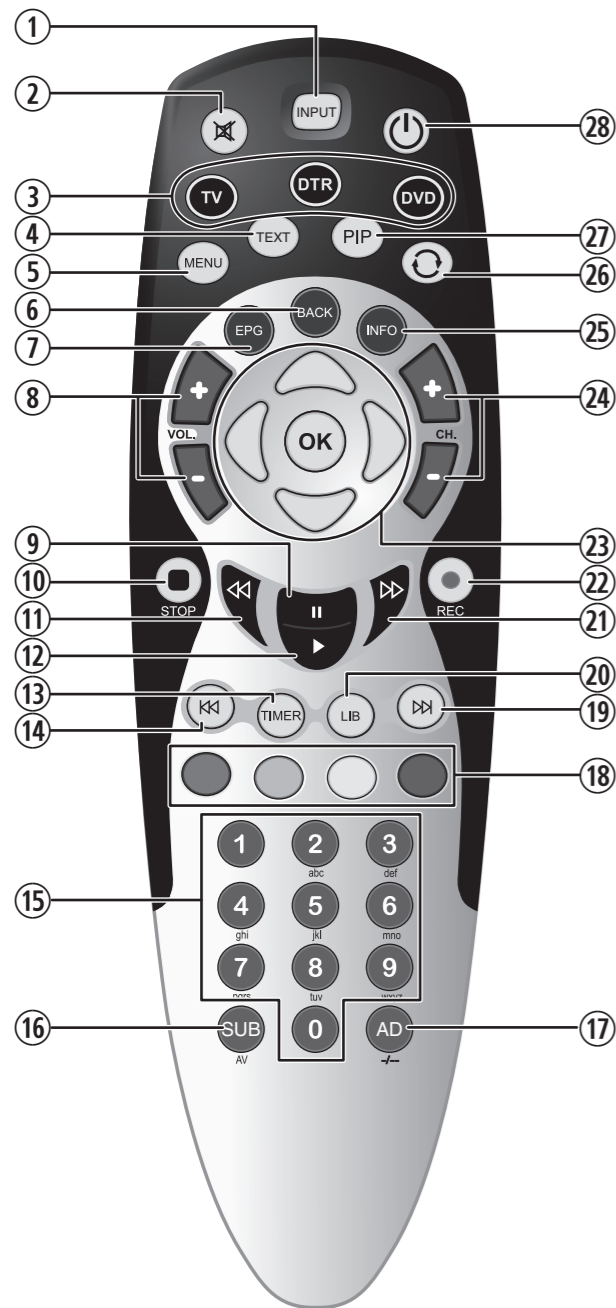

- ① **INPUT** - Switches the input mode between TV, Radio, HDMI1-2 and Photo.
- ② **MUTE** - Turns the TV's sound on/off*.
- ③ **MODE buttons** - Sets the remote control to operate the Digital TV recorder, a TV or DVD*.
- ④ **TEXT** - Displays digital text (if available).
- ⑤ **MENU** - Displays/exits the menu.
- ⑥ **BACK** - Returns to the previous level in the menu. Exits EPG, Info and Menu (first level).
- ⑦ **EPG** - Switches the Electronic Programme Guide (EPG) on/off. Refer to page 15 of the User Guide.
- ⑧ **VOL. +/-** - Adjusts the TV's volume*.
- ⑨ **PAUSE** - Pauses live TV and recordings.
- ⑩ **STOP** - Stops playback when viewing recordings.
- ⑪ **REWIND** - Rewinds live TV and recordings. Press repeatedly to increase the rewind speed.
- ⑫ **PLAY** - Plays recording and resumes paused live TV and recordings.
- ⑬ **TIMER** - Displays the Timers screen. Refer to page 22 of the User Guide.
- ⑭ **SKIP BACK** - Skips back 30 seconds when viewing a recording or watching live TV. Press and hold to skip to the start when viewing a recording or skip to the start of the pause buffer when watching live TV.
- ⑮ **0-9** - Selects channels, enter PIN.
- ⑯ **SUB/AV** - Displays subtitles (if available). In TV mode, changes the Video Input on the TV*.
- ⑰ **AD/--** - Switches Audio Description on or off. Refer to page 12 of the User Guide. In TV mode, selects double digit channel numbers*.
- ⑱ **COLOURED buttons** - Selects options in digital text/EPG/Channel List/menu.
- ⑲ **SKIP FORWARD** - Skips forward 30 seconds when viewing a recording. Press and hold to skip to the end when viewing a recording.
- ⑳ **LIB** - Displays the Library of recorded programmes. Refer to page 24 of the User Guide.
- ㉑ **FAST FORWARD** - Fast forwards recordings. Press repeatedly to increase the fast forward speed. When pausing live TV or recordings, press to watch in slow motion.
- ㉒ **REC** - Records live TV. Sets highlighted programmes to timer record in the EPG.
- ㉓ **OK/▲/▼/◀/▶** - Displays the Channel List/confirms a selection (OK button). Navigate the EPG/menu/Channel List/Info menu (▲/▼/◀/▶ buttons).
- ㉔ **CH. +/-** - Selects the next/previous channel.
- ㉕ **INFO** - Displays programme and recording information. Refer to page 17 of the User Guide.
- ㉖ **RETURN** - Returns to the previous channel watched. Switches between 4 and 24 hours advance in EPG.
- ㉗ **PIP** - Enters Picture In Picture mode. Refer to page 18 of the User Guide.
- ㉘ **POWER** - Switches the Digital TV recorder, TV* or DVD* on/into standby.

 
*Once the remote control has been programmed to operate your equipment.

Refer to page 32 of the User Guide for more informaton.

5

Automatic Tuning

1. Once you have connected the AC mains adaptor the following menu is displayed. Press **[OK]** to continue.
 - 💡 If the remote control does not work, press the **[DTR]** button and try again.

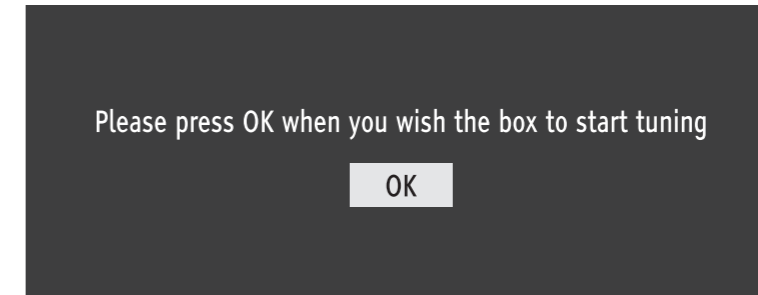


2. The Digital TV recorder will now scan and store all available channels. Depending on the quality of your reception, this may take several minutes. Please be patient and do not press any buttons.



- 💡 If no channels are found a message is displayed asking you to check your aerial. Confirm that your aerial is connected correctly and press **[OK]** to restart automatically tuning.

 3. Once the automatic tuning is complete, a summary screen is displayed.

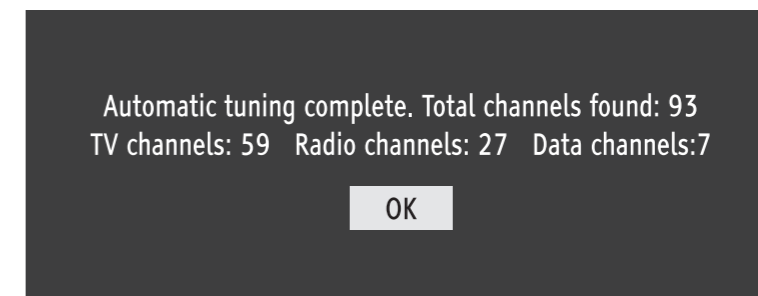

4. Press **[OK]** to exit the automatic tuning process.

Congratulations ! The Digital TV recorder is now ready to use.

6

Register your Product

Visit **TVONICS.COM**
to register your product for its 12-month guarantee.