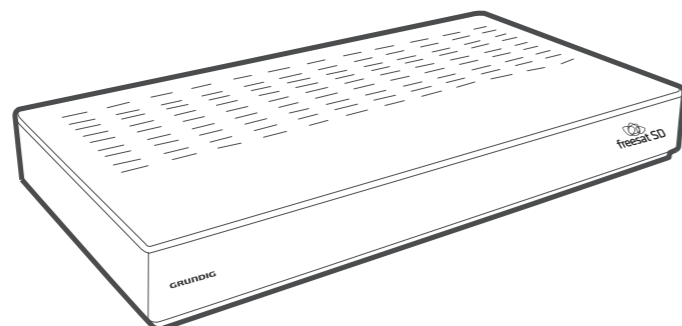


GRUNDIG

Model: GUFSAT101DHS

Crystal Mark
18141
Clarity approved by
Plain English Campaign



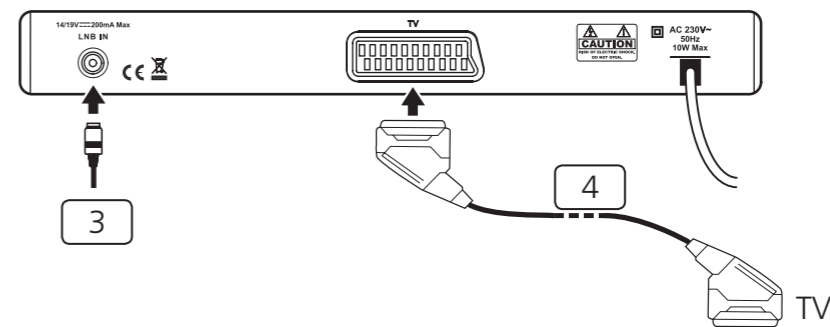
Quick-start guide for Freesat standard definition receiver

freesat SD

digital

AD Audio Description
TV narration for people
with sight problems

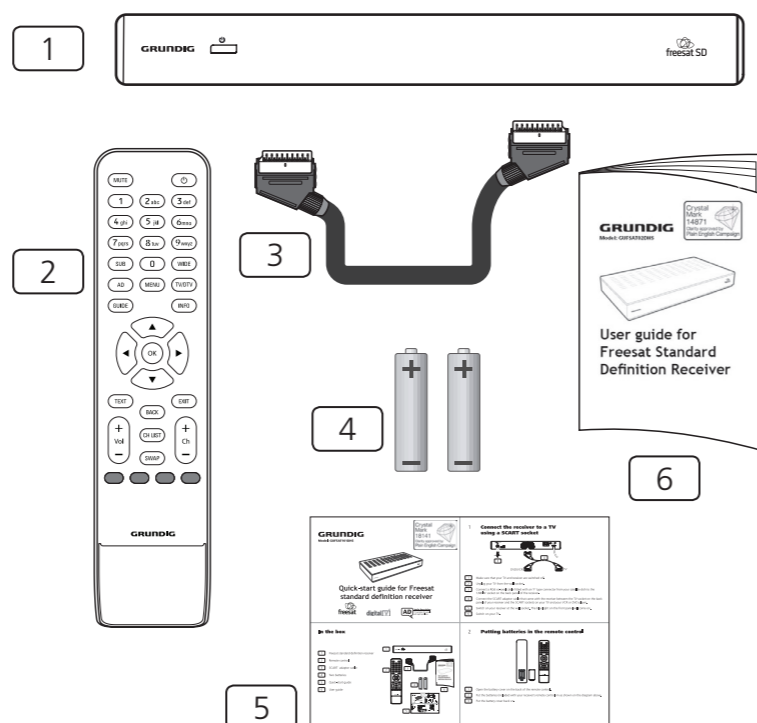
1 Connect the receiver to a TV using a SCART socket



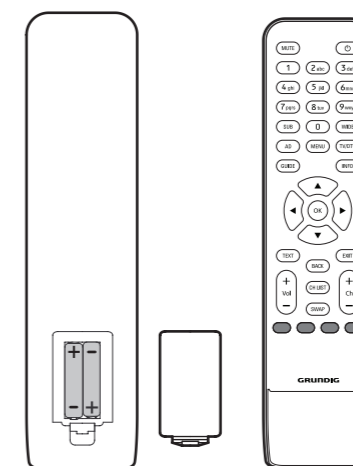
- 1 Make sure that your TV and receiver are switched off.
- 2 Unplug your TV from the wall socket.
- 3 Connect the cable that comes from your satellite dish to the socket labelled 'LNB IN' on the back panel of the receiver.
- 4 Connect the SCART cable that came with the receiver between the TV socket on the back panel of your receiver and the SCART socket on your TV.
- 5 Switch on your receiver at the wall socket. The green light on the front panel will come on.
- 6 Plug your TV back into the wall socket and switch on your TV.

In the box

- 1 Freesat standard definition receiver
- 2 Remote control
- 3 SCART cable
- 4 Two batteries
- 5 Quick-start guide
- 6 User guide


 

 
 

 
 


 

 
 
 
 


 
 


2 Putting batteries in the remote control



- 1 Open the battery cover on the back of the remote control.
- 2 Put the batteries (included with your receiver's remote control) in as shown on the diagram above.
- 3 Put the battery cover back on.

3 Using your remote control

 MUTE	Turns the receiver volume off	 OK	Selects options on the on-screen menu
 Power	Switches the receiver on and off (into standby)	 TEXT	Gives digital text
 0 to 9 wxyz	Chooses channel numbers and numbers on menus that relate to different options	 EXIT	Exits the menu system and electronic programme guide (EPG), and goes back to the last programme you were watching
 SUB	Switches subtitles on and off	 BACK	Returns to the previous menu screen in the menu system
 WIDE	Adjusts the aspect ratio (height and width) of the screen when using 4:3 display modes	 GUIDE	Enters and exits the electronic programme guide (EPG)
 AD	Switches the audio description on or off	 CH LIST	Enters and exits the channel list screen
 MENU	Enters and exits the menu screen	 SWAP	Switches between the channel you're watching and the channel you were previously watching
 Vol +/-	Increases or reduces the receiver volume	 Ch +/-	This is used to go up and down the channel list at a page at a time and for going up and down a channel when viewing a programme
 Directional pad	Moves around the on-screen menus		Changes or goes to different options when on digital text pages. These buttons also are used in the electronic programme guide (EPG)
 INFO	Gives programme information on the TV screen	 TV/DTV	This button turns off the signal from the receiver's SCART socket. The TV will go back to its previous mode for example, Analogue TV

5 Channels and volume

To change the volume

- The volume buttons on the remote control change the receiver volume only. You may also need to change your TV volume.
- To increase the volume, press the 'Vol +' button.
- To reduce the volume, press the 'Vol -' button.

To select a specific channel

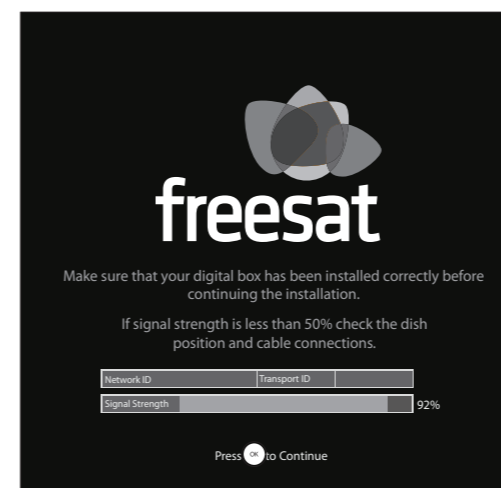
- To enter the channel number, press the  0 to  9 wxyz number buttons.

To change the channel



 

- Press the 'Ch +' button to move up a channel.
- Press the 'Ch -' button to move down a channel.

4 First-time installation

The first time you switch on your receiver, you will see a screen like the one below.


 


(You may need to press 'AV' on your remote control before you see this screen.)



- If the signal strength is above 50%, press the  button on your remote control. If the signal strength is below 50%, you may need to reposition your satellite dish and check the connecting cables.
- The receiver will search for the Network ID and Transport ID. When these have been found, press the  button on your remote control.
- Enter your postcode using the 'number' buttons on the remote control. Each time you press a number button, it scrolls through the available numbers and letters shown on that button. You do not have to enter a space in the postcode, as the receiver will automatically do this when you press the 'OK' button.
- You will also need to select the type of TV screen you have by pressing the  button on your remote control.
- Press the  button on your remote control and wait for the receiver to autotune. This may take a few minutes.
- When the autotune has finished, the first available channel will be shown.

6 Audio description and subtitles

This receiver has audio description and subtitle services. Many programmes have audio description and subtitles available, for people with hearing or sight problems.

 

Press the 'Info' button at any time to view the information display. If the  or  icons are displayed, audio description or subtitles are available for the current programme.

Audio descriptions

- To switch on audio description, press the  button. Audio description on will be shown on the screen and you will hear a high-pitched beep if AD is available. When AD is not available you will hear a low-pitched beep.
- To switch off audio description, press the  button. Audio description off will be shown on screen and you will hear a low-pitched beep.

For more information on audio descriptions, please read the user guide. (See page 27.)

Subtitles

- Press the  button to turn on subtitles. Your TV will display 'subtitles on' for a short time.
- Press the  button to turn off subtitles. Your TV will display 'subtitles off' for a short time.

For more information on subtitles, please read the user guide. (See page 27.)