

**Use these codes
to programme
your remote
control to make
it work for both
your digital box
and your TV.**

Product type	Codes to select from				
Aiwa	0705	0701	1904	1916	1908
Akai	0361	0208	0269	0371	1537
Alba	0037	1037	0556	0714	0009
Amstrad	0177	0009	0516	0264	0354
Baird	0109	0193	0343	0190	0192
Beko	0714	0486	0428	0370	0037
Black Diamond	0614	0820	1037	0556	0821
Boots	0272	0217	0009	-	-
Bush	0614	1037	0660	0714	0037
Crown	0009	0712	0370	0486	0037
Daewoo	0634	1272	0624	1203	0374
Decca	0072	0516	0075	0037	0556
DMTECH	964	1994	1338	2001	-
Evesham	1248	1719	-	-	-
Ferguson	0073	0625	0192	0190	0335
Fidelity	0163	0512	0037	0556	0371
Finlux	0105	0104	0037	0556	0714
Fujitsu	0179	0683	0186	0853	0809
GoldStar	0037	0009	0056	0370	0001
Goodmans	0634	1037	1248	0624	0037
Granada	0075	0215	0037	0556	0226
Grundig	0195	0508	1371	0535	1280
Hinari	0208	0037	0556	0009	0218
Hitachi	0225	1225	0056	0349	0578
Hyundai	0037	0803	0865	0556	0706
ITT	0163	0480	0349	0361	0473
ITT Nokia	0361	0548	0163	0473	0480
JVC	0653	1053	0190	0036	0683
LG	0056	0178	0037	0370	0377
Loewe	0512	0633	0790	0037	0556
Logik	0011	0698	0060	0773	0009
Luxor	0194	1163	0237	0290	0480
Marantz	0037	0556	0412	1532	-
Matsui	0037	0556	0487	0009	0235
Medion	0037	0714	0808	0519	0668
Mitsubishi	0108	0150	0093	0512	0037
NEC	0170	1174	0587	1170	1270
Nokia	0361	0163	0480	0349	0548
Orion	0037	0179	2001	0443	0355
Panasonic	0650	1650	0108	0226	1636
Philips	0556	0037	0238	0012	0721
Proline	0037	0556	0625	0634	0630
Pye	0037	0556	0012	0013	0087
Rediffusion	0201	0361	0548	0036	0346
Samsung	0618	0056	0587	0037	0178
Sanyo	0208	1208	0157	0292	0721
Schneider	1137	0037	0556	0519	0012
Sharp	0093	0039	1193	0157	0036
Siemens	0191	0535	0554	0200	0195
Sony	0742	1505	1651	1010	0011
Tatung	1556	0037	1553	0556	0072
Teac	0698	0037	1437	1037	0556
Telefunken	0056	0625	0560	0074	0587
Thomson	0320	0625	0560	0343	0109
Thorn	0108	0193	0109	0073	0225
Toshiba	0508	0060	1508	0502	0036
Vestel	0037	0163	0217	0556	0668
Wharfedale	0037	0861	0896	0519	1613

How to set up your universal remote control



Follow this guide to programme your new remote control to operate both your new digital box and your TV.

When you have programmed your remote control, the following buttons will control your TV.



(standby)



(mute)



(volume [UP])

and














(volume [DOWN])









 
Using a four digit code

Find the make of your TV in the code table on the back of this guide. Keep the four digit codes for your TV close to hand while programming your remote control. You may need to try more than one of the codes provided to program the remote control.


If there is no code for your TV, please read the 'Programming using the search facility' section below on the right.

- 1 Make sure that you are pointing the remote control at the TV and not at your digital box.
- 2 Press the  button and the  button on your new remote control at the same time until the  button flashes twice. Release the keys.
- 3 Enter the first four digit code from the code table overleaf for your make of TV. The top left  button will flash once every time you press a button, then twice, after you press the fourth button, to confirm that you have entered a valid code.
- 4 Press the  button and the TV should switch off. If it doesn't, repeat the whole process trying the next code in the row from the table.
- 5 If none of the codes work, try using the search facility explained on the opposite page.
- 6 When the TV switches off, you will know that you have found the correct code. Your remote control will remember this code even if you replace the batteries.
- 7 Once you have programmed your remote control to switch your TV on and off you can programme it to control your TV volume and mute functions (to turn the sound off completely). Before you do this, make sure that you have not turned down or muted the volume from your digital box.
 - A) Press both the  button and the  button (at the same time) and hold them down until the light under the  button flashes twice. Your remote control will now work the volume and mute functions of your TV.
 - B) If you ever want to change these buttons back to controlling the volume and mute of your digital box, press both the  button and the  button (at the same time) and hold them down until the light under the  button flashes four times. Your remote control will now work the volume and mute functions of your digital box.

Using the search facility

- 1 Make sure that you are pointing the remote control at the TV and not your digital box.
- 2 Press the  button and the  button on your new remote control at the same time until the  button flashes twice. Release the keys.
- 3 Press 991 (press and release 9, then 9 again, then 1). The  button will flash twice.
- 4 Press the  button and release it. The  button will flash once.
- 5 Now press the  button, and release it. Each time you press the  button, the remote control is searching for the correct code. Soon your TV will turn off. When it does turn off, press the  button to confirm this code.
- 6 Your remote control will remember this code even if you replace the batteries.
- 7 If none of the codes work, please contact your supplier.
- 8 Once you have programmed your remote control to switch your TV on and off you can programme it to control your TV volume and mute functions by following step 7 shown under 'Using the four digit code' on the left of this page.

Switchover Help Scheme remote control.

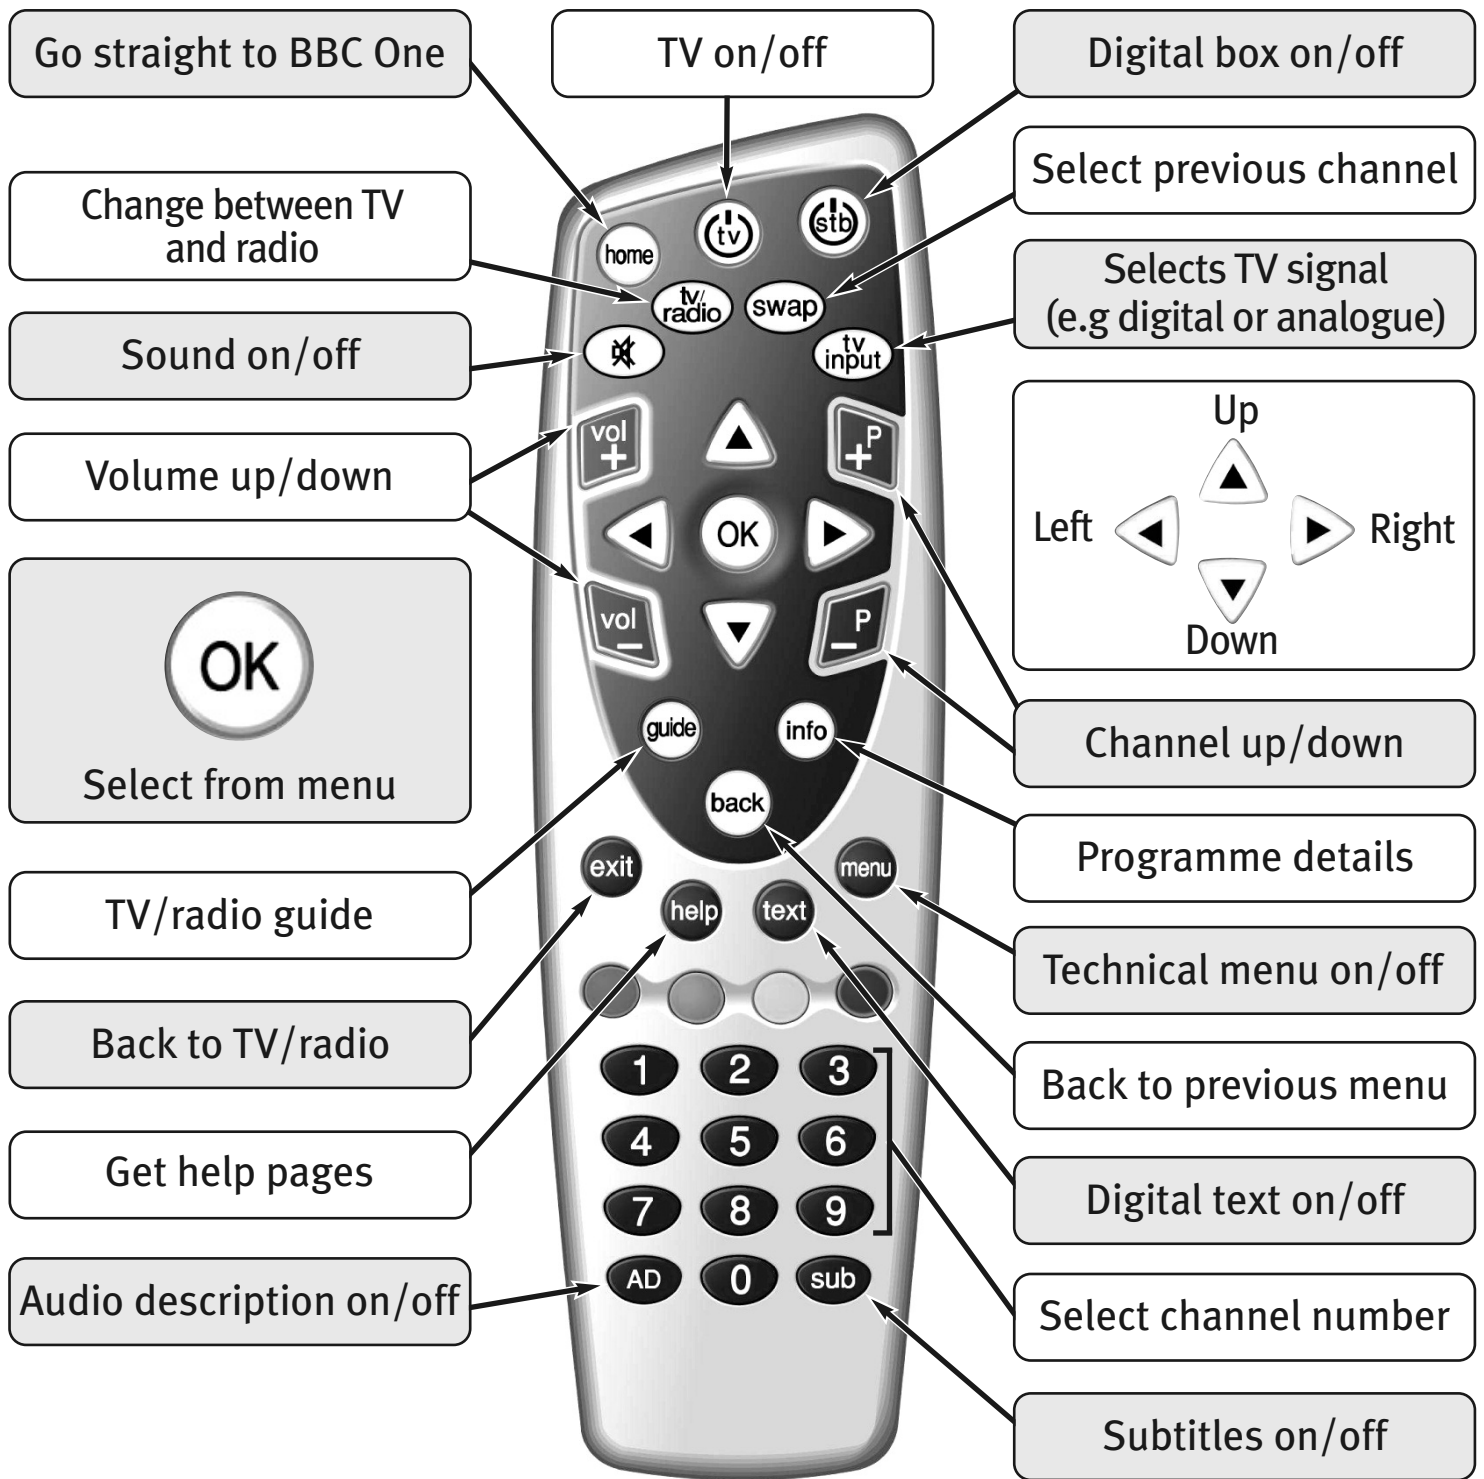

Notes: