



MDR-252  
**Quick-start guide**




# 1 Package contents

- ① Digital TV receiver
- ② Remote control
- ③ Batteries (2xAA)
- ④ AC mains adaptor
- ⑤ SCART lead
- ⑥ RF lead
- ⑦ User guide
- ⑧ Quick-start guide
- ⑨ How to set up your remote control guide




# 2 Connecting to a TV

Receiver back panel

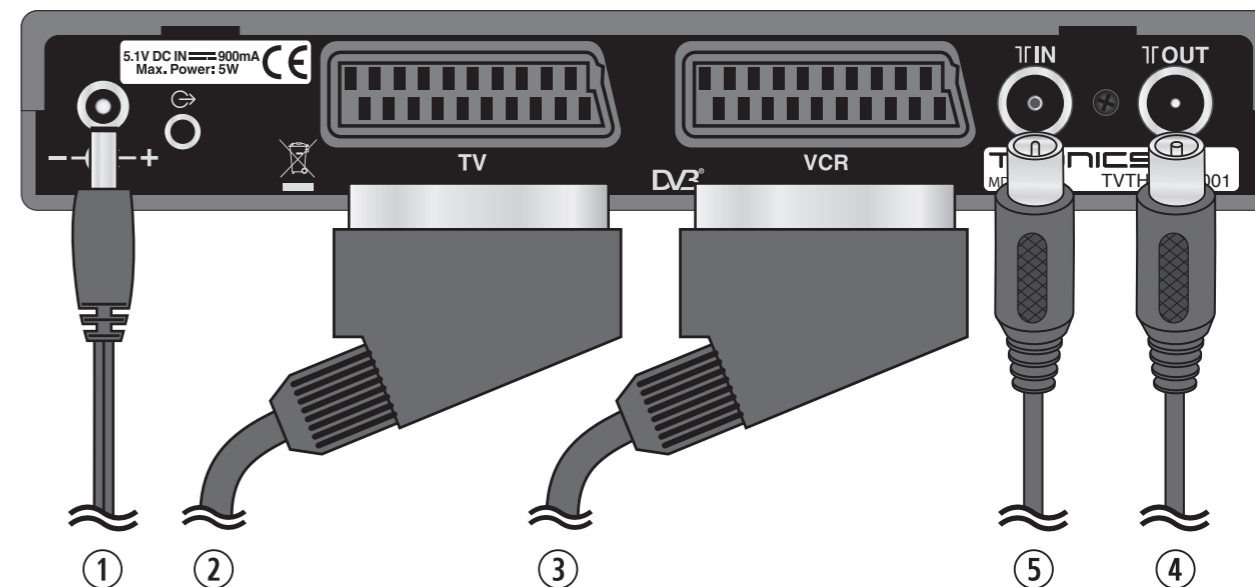

- ① Plug the supplied AC mains adaptor between the power socket on the back panel of the receiver and a standard wall socket. **Only switch on the wall socket when all cables have been attached.**
- ② Plug the supplied SCART lead between the TV socket on the back panel of the receiver and the SCART socket on your TV.
- ③ If you are using a video or DVD recorder, plug a SCART lead between the VCR socket on the back panel of the receiver and your video or DVD recorder (SCART lead not supplied).
- ④ Plug the supplied RF lead between the RF OUT socket on the back panel of the receiver and your TV, video or DVD recorder.
- ⑤ Plug the aerial lead into the RF IN socket on the back panel of the receiver.

# 3 Putting batteries into the remote control

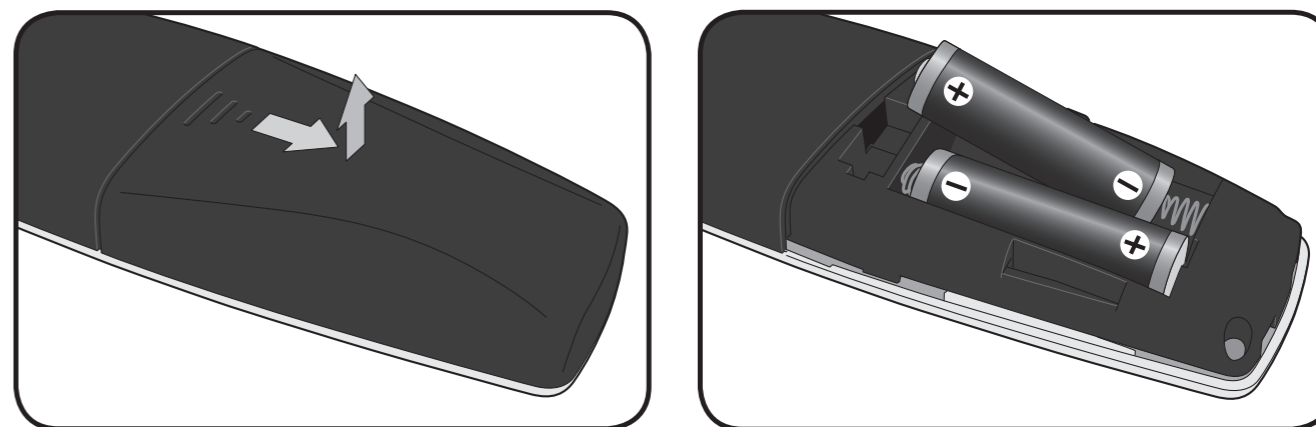


- Remove the battery cover from the remote control.
- Put two AA batteries in the compartment as shown in the diagram. The correct polarity (+ and - symbols) are also shown inside the battery compartment.
- Replace the cover.

## 4 Using the remote control

①	<b>[stb]</b>	Switches the digital TV receiver on or into standby
②	<b>[tv]</b>	Switches the TV on or off (if you have programmed it to do this)
③	<b>[home]</b>	Cancels any on-screen menu and returns the digital TV receiver to the first channel stored in the Channel list (usually, BBC One)
④	<b>[tv/radio]</b>	Switches between digital TV and digital radio channels
⑤	<b>[swap]</b>	Switches between the channel you're currently watching and the channel you were previously watching
⑥	<b>[mute]</b>	Turns the sound on or off
⑦	<b>[tv input]</b>	Chooses the TV input source (if you have programmed the remote control to do this)
⑧	<b>[arrow]</b> ▲, ▼, ◀, ▶	Move around the on-screen menus
⑨	<b>[vol +/-]</b>	Increases or reduces the receiver volume. Can also be used to increase or reduce your TV volume (if you have programmed it to do this)
⑩	<b>[P +/-]</b>	Goes up or down the channels

⑪	<b>[OK]</b>	Displays the Channel list and selects options on the on-screen menus (see page 16 of the user guide)
⑫	<b>[guide]</b>	Enters and leaves the Programme guide, also called Electronic Programme Guide (EPG) (see page 18 of the user guide)
⑬	<b>[info]</b>	Displays programme information (see page 17 of the user guide)
⑭	<b>[back]</b>	Goes back to the previous menu screen you were on
⑮	<b>[exit]</b>	Goes out of the menu and goes back to the last programme you were watching
⑯	<b>[menu]</b>	Enters and leaves the menu screen
⑰	<b>[help]</b>	Enters and leaves the Help screen
⑱	<b>[text]</b>	Gives digital teletext (if available)
⑲	<b>[red, green, yellow, blue]</b>	Changes or goes to different options when on the digital teletext pages
⑳	<b>[0-9]</b>	Chooses channels, enters PIN, uses Help pages
㉑	<b>[AD]</b>	Switches Audio Description on or off
㉒	<b>[sub]</b>	Switches Subtitles on or off (if available)

**NOTE:** To set up the remote control for your TV, please refer to the 'How to setup your universal remote control' guide supplied with this product.

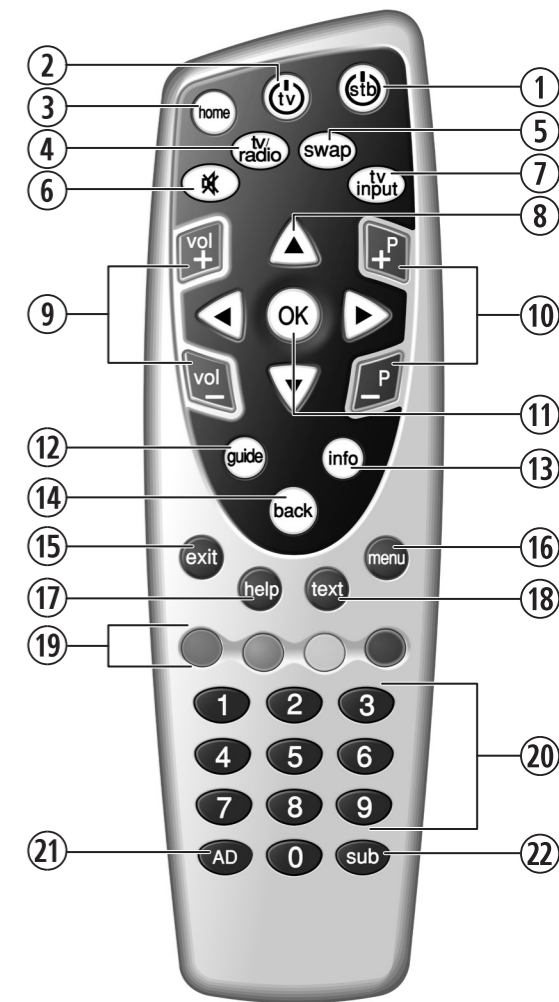

## 5 Automatic tuning

The first time you switch on your digital TV receiver you will see a Startup screen.

Press the **[OK]** button on the remote control to begin automatic tuning.

When automatic tuning has finished, you may see a region preference screen. This list will show the regions that are available to you, with the best-quality signal shown at the top of the list (1).

Make your selection and then press the **[red]** button to remove the region preference screen and a summary screen is shown.

Press the **[OK]** button to remove the summary screen and start watching digital TV.

## 6 Channels and volume

### To change channel

- Press the **[P+]** button to move up a channel.
- Press the **[P-]** button to move down a channel.

### To change to a particular channel

- To enter the channel number, press the **[0]** to **[9]** buttons, then **[OK]**.

### To change the volume

- Press the **[vol +]** button to increase the volume.
- Press the **[vol-]** button to reduce the volume.

## 7 Audio Description and Subtitles

Many programmes are broadcast with Audio Description and Subtitles.

Press the **[info]** button on the remote control at any time to see if Audio Description or Subtitles are available. Look for the **[AD]** and **[S]** symbols.

### Audio Description

Audio Description is a spoken explanation that describes all important information on a programme, such as body language, facial expressions, scenery, action, costumes or anything that helps to describe the plot of the story, event or image.

- To switch Audio Description on, press the **[AD]** button. You will hear one short beep. If AD is available you will hear another two

short beeps. If AD is **not** available, there will be no extra beeps. When you change channel you will also hear two short beeps if AD is available.

- To switch Audio Description off, press the **[AD]** button. You will hear one long beep.

### Subtitles

- Press the **[sub]** button on the remote control to display Subtitles (if available).
- Press the **[sub]** button on the remote control to switch off Subtitles.

Please check the user guide for more detailed information.