

TVONICS



Quick start Guide for your digital TV Recorder




This is in Easy Read



This information tells you how to set up your digital TV recorder.

This is what you should have.


This is the digital TV recorder.

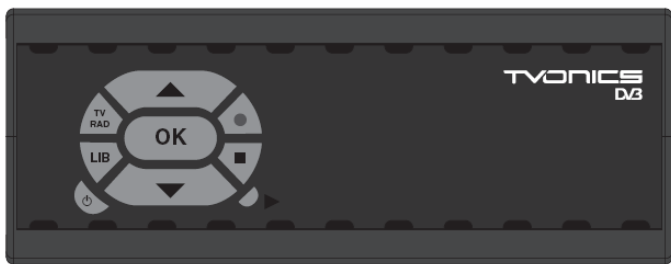


This is the remote control.



These are the batteries.

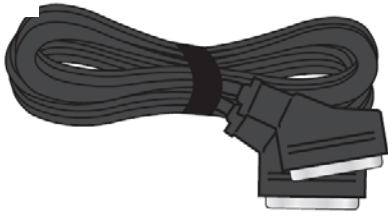

This is the SCART lead.

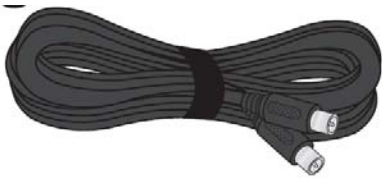

This is the RF cable.



This the cable for the power supply.



6 rubber feet.

You should also have:

- a user guide

Please follow the steps on the next pages.


Putting batteries into the remote control.



This is the remote control.




These are the batteries

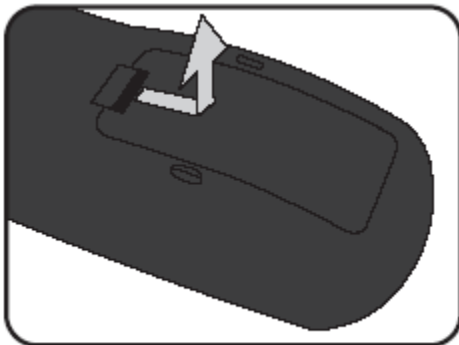

Open up the back of the remote control.

This is where you put the batteries in.

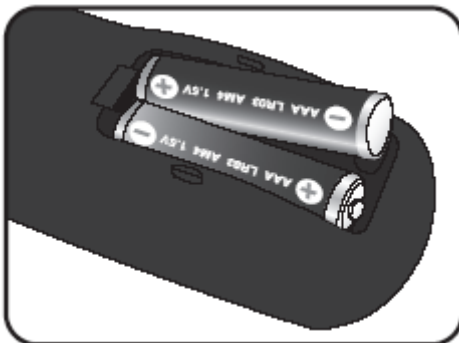

Put the batteries in.

You will see + and -. These tell you which way round the batteries go

Put the cover back on.

Putting the rubber feet on.



These are the rubber feet.

There are:

- 4 flat feet
- 2 curved feet

If you want the recorder lying down.

Turn your recorder upside down.

You need to use the 4 flat feet

This picture shows you where the feet should go.




If you want the recorder standing up

You need the 2 curved feet.

This picture shows you where the feet should go.



When you have put the feet on you can stand the recorder up.

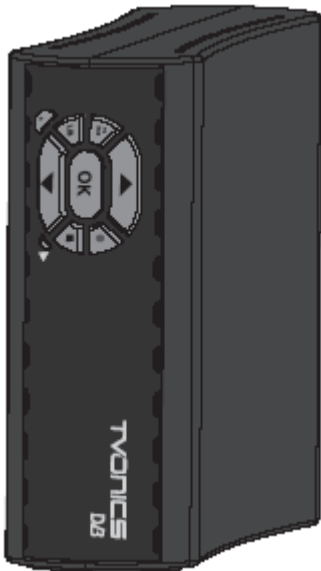

Setting up your new recorder with your TV.


Important:

Make sure your TV is turned off and unplugged. Make sure all your new equipment is turned off and unplugged.

Take the aerial lead out of your TV. Plug it in to the back of your receiver where it says IN.


Plug the SCART lead into your recorder where it says TV. Plug the other end of the SCART lead into your TV.

This is a SCART lead.

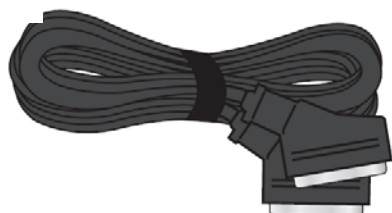

Plug one end of the RF cable into your recorder where it says OUT.

Plug the other end into the RF IN socket on your TV or VCR/DVD.

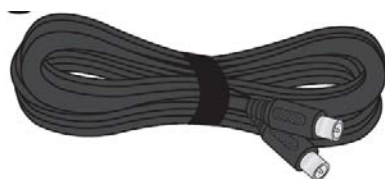

This is the RF lead.

Plug the mains lead into the back of the recorder.



This is the mains lead.

Plug your recorder in at the wall.

A socket is where you plug in cables and leads.

The user guide tells you how to set the recorder up with your VCR or DVD and audio system.

The first time you turn your recorder on.
The first time you turn your receiver on you will get a
welcome screen come up on your TV.

Please press OK when you wish the box to start tuning

OK

[OK] Press the OK button on the remote control.

**If your remote control doesn't work press the DTR
button and try again.**



Your recorder will now start to find all the TV and radio
channels. This is called tuning in.

[OK]

When it has finished a different screen will come up
on your TV. Press the OK button on the remote
control to get rid of this.



**You can now start to enjoy digital TV and
radio.**

Your remote control



This is the remote control.

The user guide tells you more about what each of the different buttons is for.

Here's a quick guide to the buttons you will use the most.



This lets you change from TV to radio and back again.



Turns the recorder on and off (standby).



This takes you back to the channel you were watching before.



This shows you information about the TV programmes.



This takes you to the next channel.



This takes you to the channel before.



This records digital TV.



This shows you the programmes you have got recorded and stored.



This lets you look at digital text.



This turns subtitles on and off.



This shows you what timers you have set up.



These buttons let you:

- pause live TV and recordings
- continue live TV and recordings if you have pressed pause.



This button lets you rewind live TV and recordings.



These buttons turn the sound on your TV up and down.

This will only work if your remote control is set up to work with your TV. You can find out about this in the user guide.



This shows you the guide to what's on.



This turns the sound off on your TV.

This will only work if your remote control is set up to work with your TV. You can find out about this in the user guide.

There are ten number buttons 0 – 9.

You can use these to choose the channel you want.

Important

You need to register your recorder to get your 12-month guarantee.

You need to do this online.

Go to www.Tvonics.com